Handling stand HST

Simply working better – handling systems from DSM



Daily recurring operations makes the tool with time heavier and heavier for the user – if you also considers the reaction torque and incorrect holding of the tool, a disorder of the hand-arm-shoulder system cannot be excluded.

Preserve the health of your employees!

A torque support with weight compensation is essential for fatigue-free work in assembly. The additional control of the position of the tool enables cost-effective monitoring of complex tightening sequences in the manual assembly.

Handling stand HST

Advanced handling – precise, reaction-free and clever

With the HST series, DSM offers advanced handling devices for the tasks and applications of manually guided and semi-automated assembly.

Equipped with absolute sensor technology and integrated positioning electronic, the HST handling stand extend the functionality of your tightening system.

The positioning electronic PoSys in conjunction with a higher-level control system check whether a defined sequence of operations is maintained.

No screw will be forgotten and even complex tightening sequences can be specified and monitored – or call up the corresponding sequence in your DSM control system via the screw position.



HST-40 | HST-40-XY
Up to 40 Nm
Tool weight max. 5 kg
Stroke Y: 300 mm Z: 400 mm



HST-150 | HST-150-XY Up to 150 Nm Tool weight max. 15 kg Stroke Y: 450 mm Z: 720 mm



HST-300 | HST-300-XY Up to 300 Nm Tool weight max. 30 kg Stroke Y: 600 mm Z: 850 mm



HST-600 | HST-600-XY

Up to 600 Nm


Tool weight max. 40 kg

Stroke Y: 550 mm Z: 750 mm

HST-40

Precise, reaction-free and extremely light handling in the entire workspace.

Absorption of all reaction forces and compensation of torques up to 40 Nm. Optimal smooth-running weight compensation with a maximum tool weight of 5 kg. Extensive range of equipment options for the models HST-40 (without sensor) and **HST-40-XY** (with integrated position monitoring) available.

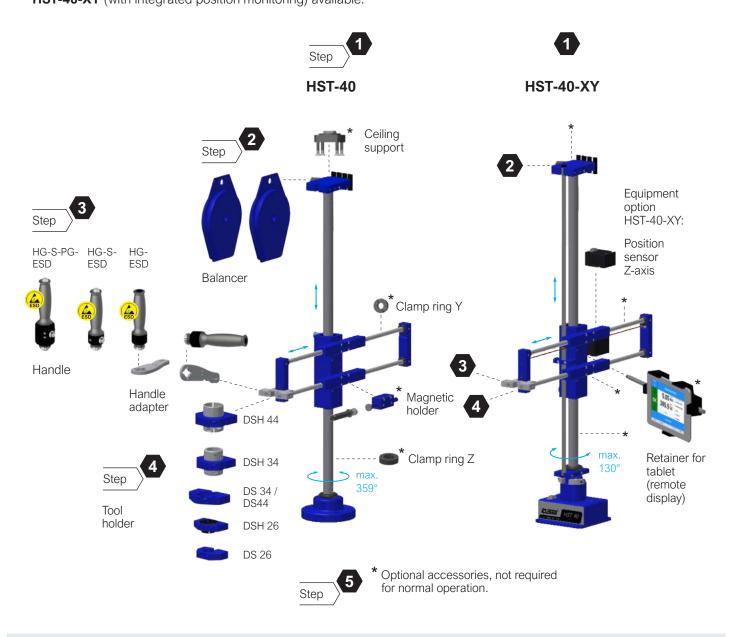

Use the following steps to assemble your handling stand and select the optimal components from the HST-40 series for your application.



Choose between the Choose a balancer variant HST-40 and for the weight compensation

Step



Choose a handle



Choose a tool holder



Add optional accessories if necessary

HST-40-XY



Variant of the handling stand (Size HST-40)

| | | | HST-40 | HST-40-XY |
|---|------|------------|-----------|------------|
| Absolute XY position sensor | | | | ✓ |
| Position controller (PoSys) integrated in the stand | | | | ✓ |
| Vertical stroke (Z) | [mm] | | 400 | 400 |
| Horizontal stroke (Y) | [mm] | | 300 | 300 |
| Swivel angle | [°] | max. | 359 | 130 |
| Reaction torque | [Nm] | up to max. | 40 | 40 |
| Tool weight | [kg] | max. | 5 | 5 |
| Height of vertical stand | [mm] | | 840 | 890 |
| Length of horizontal arm (without tool holder) | [mm] | | 550 | 550 |
| Weight horizontal arm | [kg] | | 2,5 | 2,5 |
| Weight handling stand | [kg] | | 16 | 16 |
| Article number | | | H-6002340 | see Page 5 |

HST-40 | HST-40-XY - Robust designed handling stand

Pedestal with mounting holes, vertical stand with precision shaft, horizontal arm with precision double shaft as well as guides with smooth-running industrial bearings. Construction to accommodate torsion forces with fixing points for balancer and cable, prepared for the mounting of tool holder and handle.

HST-40-XY - Position monitoring of assembly tool

Fixed sequences have to be observed by a lot of applications of the hand-guided and the semi-automated assembly. Equipped with an XY sensor system (Z sensor optional) and with an position controller (PoSys) integrated in the pedestal, the HST-40-XY extends the functionality of your tightening system. The position electronic monitors in conjunction with a higher-level control system that the required sequence is observed.

No screw will be forgotten – even complex tightening sequences can be specified and monitored. Or you select the corresponding sequence program on your DSM control system via the screw position.

Other features:

- Absolute XY position measurement in the rotation axis and in the horizontal arm
- Position input via teach-in, storage up to 200 positions
- Position monitoring
- Reporting of the stored positions "Pos reached"
- Direct output mode as "XY position"
- DSM software for programming and configuration of the positioning controller
- USB interface for connection with the DSM application software, incl. USB cable
- System bus interface for communication with DSM control system, for power supply via control system or plug-in power supply unit
- TCP/IP interface for communication with the DSM application software
- Optional Profibus interface, Profinet interface or EtherCAT interface for connection to a higher-level control system

Equipment option for handling stand HST-40-XY

| Туре | | Article number |
|--------------|--|----------------|
| HST-40-Zsens | Position sensor Z-axis, incl. Y-connection cable | H-6006012 |



PoSys Page 25

HST-40-XY equipped with position controller PoSys | Executions

| Туре | | Article number |
|----------------------|---|----------------|
| HST-40-XY-PB | Handling stand with XY sensors and integrated PoSys with Profibus interface | H-6002345 |
| HST-40-XY-PN | Handling stand with XY sensors and integrated PoSys with Profinet interface | H-6002346 |
| HST-40-XY-EC | Handling stand with XY sensors and integrated PoSys with EtherCAT interface | H-6002347 |
| Equipment optio | n | |
| Туре | | Article number |
| Plug-in power supp | ly unit AC 230 V / 50 Hz DC 24 V / 1 A (for use without DSM control system) | DSM-600611 |
| System bus acce | essories | |
| Туре | | Article number |
| System bus cable | 2 m | MS-1003002 |
| System bus cable 5 m | | MS-1003005 |
| System bus termina | ating resistor | MS-1003030 |
| Y-piece for system | bus connection | MS-1003046 |



Take tool weight and the weight of the horizontal arm into account when choosing the balancer.

Handling balancer HBA for handling stand HST-40 | HST-40-XY

| Туре | Ideal for DSM nutrunner | Weight compensation, load capacity adjustable | Article number |
|-------------|---------------------------------|---|----------------|
| HBA-23,5-kg | DSH 26 / DS 26 | from 2 kg up to 3,5 kg | H-6008004 |
| HBA-58,5-kg | DSH 34 / DS 34 / DSH 44 / DS 44 | from 5 kg up to 8,5 kg | H-6008009 |



Ergonomically formed handles for precise guidance of the tool (nutrunner). Versatile mounting possibilities via handle adapter. Execution with start button for the direct forwarding of the start signal to the control system. Variant with rotary switch for switching between the preselected sequence programme and an alternative sequence.

Handle

| Туре | | Article number |
|-------------|--|----------------|
| HG-ESD | Standard handle in ESD-compliant design | H-6007820 |
| HG-S-ESD | Handle with start button (double) in ESD-compliant design | H-6007825 |
| HG-S-PG-ESD | Handle with start button (double) and programme switchover in ESD-compliant design | H-6007830 |

Standard adapter for the vertical and horizontal assembly of the handle. The installation can be made on the right side as well as on the left side of the tool holder of the handling stand.

Handle adapter for the HST-40 series

| Туре | | Article number |
|----------|---------------------------|----------------|
| HG-A-H40 | Handle adapter kit HST-40 | H-6007886 |

Choose the appropriate cable depending on the use of the handle.

If you are using a nutrunner of the DS 34 or DS 44 series the connection to the DSM control is made via the bus line of the DS nutrunner – the handle cable is plugged into the SB socket at the nutrunner. The cable is available in two different lengths suitable for the respective assembly situation.

Alternatively, the handle can be connected directly with the control system or with a higher-level control system. Corresponding cables for this can be found in the table below.

Handle cable for the HST-40 series

| Туре | Connection | Cable length | Article number |
|--------------------|---|--------------|----------------|
| HG-K-DS34-44-160 | from HG-S-ESD to DS 34 / DS 44 | 160 mm | H-6007940 |
| HG-K-DS34-44-300 | from HG-S-ESD to DS 34 / DS 44 | 300 mm | H-6007941 |
| HG-K-24V-4.XX | from HG-S-ESD to MultiBasic / MultiClassic / MultiPro | 5 m | H-6007905 |
| HG-K-24V-5.XX | from HG-S-ESD to MultiPro 3G | 5 m | H-6007910 |
| HG-K-24-oK | from HG-S-ESD to (open cable ends) | 5 m | H-6007915 |
| HGPG-K-DS34-44-160 | from HG-S-PG-ESD to DS 34 / DS 44 | 160 mm | H-6007744 |
| HGPG-K-DS34-44-300 | from HG-S-PG-ESD to DS 34 / DS 44 | 300 mm | H-6007745 |
| HGPG-K-24-oK | from HG-S-PG-ESD to (open cable ends) | 2 m | H-6007720 |



The tool / nutrunner is attached to the handling stand with a suitable holder. Tool holders adapted to the size of the DSM nutrunners that can be used can be selected here. Adaptation of third-party products is made with the universal tool holder or a customised solution on request.

Handling tool holder for the HST-40 series

| Туре | Tool holder for | Article number |
|------------------|---|----------------|
| HWA-40-DS26 | DS 26 Built-in nutrunner | H-6008426 |
| HWA-40-DSH26 | DSH 26 Hand-held nutrunner | H-6008427 |
| HWA-40-DS34/DS44 | DS 34 / DS 44 Built-in nutrunner | H-6008434 |
| HWA-40-DSH34 | DSH 34 Hand-held nutrunner | H-6008234 |
| HWA-40-DSH38 | DSH 38 Hand-held nutrunner | H-6008238 |
| HWA-40-DSH44 | DSH 44 Hand-held nutrunner | H-6008244 |
| HWA-40-Uni-36-42 | 36 - 42 mm clamping diameter, Universal tool holder | H-6008405 |
| | | |



Accessories for individual adaptation of the handling stand for your application.

Optional accessories* Handling stand HST-40

| Туре | | Article number |
|----------------------|---|----------------|
| HST-40-MH | Magnetic holder Magnetically holding device for the Y-axis to fix the nutrunner / tool in park position | H-6006406 |
| HST-40-DA | Ceiling support Additional fixing of the handling stand via a pivoted support designed to improve the load carrying capacity | H-6006410 |
| HST-40-KL-Y | Clamp ring for Y-axis Variable positionable limiter of the horizontal stroke for the fast reaching of the tool position | H-6006420 |
| HST-40-KL-Z-150-KL-Y | Clamp ring for Z-axis Variable positionable limiter of the vertical stroke for the fast reaching of the tool position | H-6006430 |
| HST-40-SWA** | Stops for swivel angle limitation (rotation axis) Two circle segments with rubber stops for the limitation of the swivel angle adjustable in steps of 30 degrees (min. 20° / max. 130°) | H-6006440 |
| HST-FA | Retainer for tablet (remote display) Adjustable retainer for the remote display HMI 7" incl. assembly kit; Remote display only in conjunction with MultiPro 3G (BT module) usable | H-6006005 |

^{*} No optional accessories are required for normal operation.




^{**} Standard for the HST-40-XY version of the handling stand.

HST-150

Precise, reaction-free and extremely light handling in the entire workspace.

Absorption of all reaction forces and compensation of **torques up to 150 Nm**. Optimal smooth-running weight compensation with a maximum **tool weight of 15 kg**. Extensive range of equipment options for the models **HST-150** (without sensor) and **HST-150-XY** (with integrated position monitoring) available.

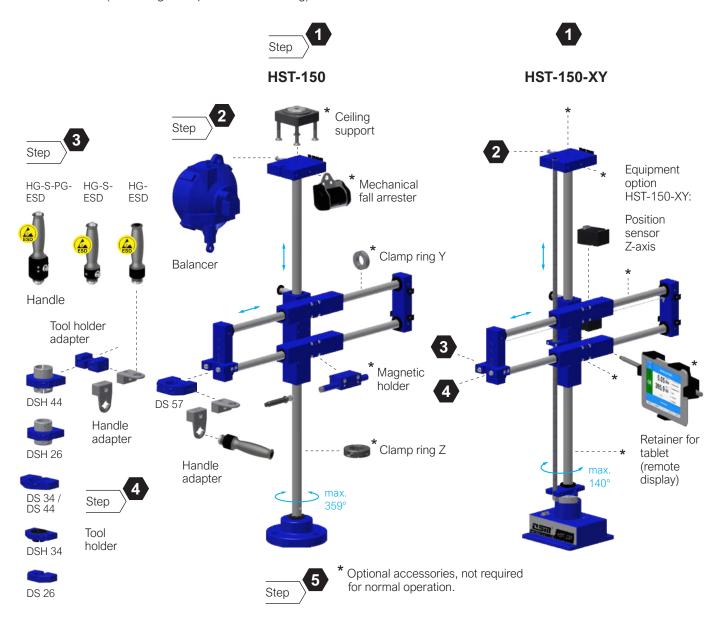

Use the following steps to assemble your handling stand and select the optimal components from the HST-150 series for your application.



Choose between the variant HST-150 and HST-150-XY



Choose a balancer for the weight compensation



Choose a handle



Choose a tool holder



Add optional accessories if necessary



Variant of the handling stand (Size HST-150)

| | | | HST-150 | HST-150-XY |
|---|------|------------|-----------|-------------|
| Absolute XY position sensor | , | | | ✓ |
| Position controller (PoSys) integrated in the stand | | | | ✓ |
| Vertical stroke (Z) | [mm] | | 720 | 720 |
| Horizontal stroke (Y) | [mm] | | 450 | 450 |
| Swivel angle | [°] | max. | 359 | 140 |
| Reaction torque | [Nm] | up to max. | 150 | 150 |
| Tool weight | [kg] | max. | 15 | 15 |
| Height of vertical stand | [mm] | | 1150 | 1200 |
| Length of horizontal arm (without tool holder) | [mm] | | 800 | 800 |
| Weight horizontal arm | [kg] | | 14 | 14 |
| Weight handling stand | [kg] | | 35 | 35 |
| Article number | | | H-6002150 | see Page 10 |

HST-150 | HST-150-XY - Robust designed handling stand

Pedestal with mounting holes, vertical stand with precision shaft, horizontal arm with precision double shaft as well as guides with smooth-running industrial bearings. Construction to accommodate torsion forces with fixing points for balancer and cable, prepared for the mounting of tool holder and handle.

HST-150-XY - Position monitoring of assembly tool

Fixed sequences have to be observed by a lot of applications of the hand-guided and the semi-automated assembly. Equipped with an XY sensor system (Z sensor optional) and with an position controller (PoSys) integrated in the pedestal, the HST-150-XY extends the functionality of your tightening system. The position electronic monitors in conjunction with a higher-level control system that the required sequence is observed.

No screw will be forgotten – even complex tightening sequences can be specified and monitored. Or you select the corresponding sequence program on your DSM control system via the screw position.

Other features:

- Absolute XY position measurement in the rotation axis and in the horizontal arm
- Position input via teach-in, storage up to 200 positions
- Position monitoring
- Reporting of the stored positions "Pos reached"
- Direct output mode as "XY position"
- DSM software for programming and configuration of the positioning controller
- USB interface for connection with the DSM application software, incl. USB cable
- System bus interface for communication with DSM control system, for power supply via control system or plug-in power supply unit
- TCP/IP interface for communication with the DSM application software
- Optional Profibus interface, Profinet interface or EtherCAT interface for connection to a higher-level control system

Equipment option for handling stand HST-150-XY

| Туре | | Article number |
|-----------------------|--|----------------|
| HST-150-300-600-Zsens | Position sensor Z-axis, incl. Y-connection cable | H-6006014 |



PoSys Page 25

HST-150-XY equipped with position controller PoSys | Executions

| Туре | | Article number |
|----------------------|--|----------------|
| HST-150-XY-PB | Handling stand with XY sensors and integrated PoSys with Profibus interface | H-6002155 |
| HST-150-XY-PN | Handling stand with XY sensors and integrated PoSys with Profinet interface | H-6002154 |
| HST-150-XY-EC | Handling stand with XY sensors and integrated PoSys with EtherCAT interface | H-6002153 |
| Equipment option | 1 | |
| Туре | | Article number |
| Plug-in power suppl | y unit AC 230 V / 50 Hz DC 24 V / 1 A (for use without DSM control system) | DSM-600611 |
| System bus acce | essories | |
| Туре | | Article number |
| System bus cable 2 | 2 m | MS-1003002 |
| System bus cable 5 m | | MS-1003005 |
| System bus termina | ting resistor | MS-1003030 |
| Y-piece for system k | ous connection | MS-1003046 |



Take tool weight and the weight of the horizontal arm into account when choosing the balancer.

Handling balancer HBA for handling stand HST-150 | HST-150-XY

| Туре | Ideal for DSM nutrunner | Weight compensation, load capacity adjustable | Article number |
|-------------|---------------------------------|---|----------------|
| HBA-1522-kg | DSH 34 / DS 34 / DSH 44 / DS 44 | from 15 kg up to 22 kg | H-6008022 |
| HBA-2230-kg | DS 57 | from 22 kg up to 30 kg | H-6008030 |



Ergonomically formed handles for precise guidance of the tool (nutrunner). Versatile mounting possibilities via handle adapter. Execution with start button for the direct forwarding of the start signal to the control system. Variant with rotary switch for switching between the preselected sequence programme and an alternative sequence.

Handle

| Туре | | Article number |
|-------------|--|----------------|
| HG-ESD | Standard handle in ESD-compliant design | H-6007820 |
| HG-S-ESD | Handle with start button (double) in ESD-compliant design | H-6007825 |
| HG-S-PG-ESD | Handle with start button (double) and programme switchover in ESD-compliant design | H-6007830 |

Standard adapter for the vertical and horizontal assembly of the handle. The installation can be made on the right and left side as well as on the front of the tool holder of the handling stand.

Handle adapter for the HST-150 series

| Туре | | Article number |
|-------------------|--|----------------|
| HG-A-H150-300-600 | Handle adapter kit HST-150 / HST-300 / HST-600 | H-6007885 |

Choose the appropriate cable depending on the use of the handle.

If you are using a nutrunner of the DS 34, DS 44 or DS 57 series the connection to the DSM control is made via the bus line of the DS nutrunner – the handle cable is plugged into the SB socket at the nutrunner. The cable is available in two different lengths suitable for the respective assembly situation.

Alternatively, the handle can be connected directly with the control system or with a higher-level control system. Corresponding cables for this can be found in the table below.

Handle cable for the HST-150 series

| Туре | Connection | Cable length | Article number |
|--------------------|---|--------------|----------------|
| HG-K-DS34-44-160 | from HG-S-ESD to DS 34 / DS 44 | 160 mm | H-6007940 |
| HG-K-DS34-44-300 | from HG-S-ESD to DS 34 / DS 44 | 300 mm | H-6007941 |
| HG-K-DS57-80-300 | from HG-S-ESD to DS 57 / DS 80 | 300 mm | H-6007959 |
| HG-K-DS57-80-500 | from HG-S-ESD to DS 57 / DS 80 | 500 mm | H-6007960 |
| HG-K-24V-4.XX | from HG-S-ESD to MultiBasic / MultiClassic / MultiPro | 5 m | H-6007905 |
| HG-K-24V-5.XX | from HG-S-ESD to MultiPro 3G | 5 m | H-6007910 |
| HG-K-24-oK | from HG-S-ESD to (open cable ends) | 5 m | H-6007915 |
| HGPG-K-DS34-44-160 | from HG-S-PG-ESD to DS 34 / DS 44 | 160 mm | H-6007744 |
| HGPG-K-DS34-44-300 | from HG-S-PG-ESD to DS 34 / DS 44 | 300 mm | H-6007745 |
| HGPG-K-24-oK | from HG-S-PG-ESD to (open cable ends) | 2 m | H-6007720 |
| HGPG-K-DS57-80-300 | from HG-S-PG-ESD to DS 57 / DS 80 | 300 mm | H-6007756 |
| HGPG-K-DS57-80-500 | from HG-S-PG-ESD to DS 57 / DS 80 | 500 mm | H-6007757 |



The tool / nutrunner is attached to the handling stand with a suitable holder. Tool holders adapted to the size of the DSM nutrunners that can be used can be selected here. Adaptation of third-party products is made with the universal tool holder or a customised solution on request.

Handling tool holder for the HST-150 series

| Туре | Tool holder for | Article number |
|-------------------|---|----------------|
| HWA-150-DS57 | DS 57 Built-in nutrunner | H-6008157 |
| HWA-150-Uni-56-62 | 56 - 62 mm clamping diameter, Universal tool holder | H-6008155 |

The tool holders of the HST-40 can be attached to the handling stand HST-150 with the aid of a tool holder adapter.

Handling tool holder adapter for the HST-150 series

| Туре | | Article number |
|------------|---|----------------|
| HWA-150-AD | Adaptation of tool holders type "HWA-40" to HST-150 | H-6008415 |

HST-40 handling tool holder for the use with adapter HWA-150-AD

| Туре | Tool holder for | Article number |
|------------------|---|----------------|
| HWA-40-DS34/DS44 | DS 34 / DS 44 Built-in nutrunner | H-6008434 |
| HWA-40-DSH34 | DSH 34 Hand-held nutrunner | H-6008234 |
| HWA-40-DSH38 | DSH 38 Hand-held nutrunner | H-6008238 |
| HWA-40-DSH44 | DSH 44 Hand-held nutrunner | H-6008244 |
| HWA-40-Uni-36-42 | 36 - 42 mm clamping diameter, Universal tool holder | H-6008405 |



Accessories for individual adaptation of the handling stand for your application.

Optional accessories* Handling stand HST-150

| Туре | | Article number |
|-----------------------|---|----------------|
| HST-150-MH | Magnetic holder Magnetically holding device for the Y-axis to fix the nutrunner / tool in park position | H-6006155 |
| HST-150-DA | Ceiling support Additional fixing of the handling stand via a pivoted support designed to improve the load carrying capacity | H-6006105 |
| HST-40-KL-Z-150-KL-Y | Clamp ring for Y-axis Variable positionable limiter of the horizontal stroke for the fast reaching of the tool position | H-6006430 |
| HST-150-KL-Z-300-KL-Y | Clamp ring for Z-axis Variable positionable limiter of the vertical stroke for the fast reaching of the tool position | H-6006330 |
| HST-150-300-FS | Mechanical fall arrester Fall protection for horizontal arm to prevent damage in case of a defect of the counterbalance system | H-6006315 |
| HST-150-SWA** | Stops for swivel angle limitation (rotation axis) Two circle segments with rubber stops for the limitation of the swivel angle adjustable in steps of 30 degrees (min. 20° / max. 140°) | H-6006415 |
| HST-FA | Retainer for tablet (remote display) Adjustable retainer for the remote display HMI 7" incl. assembly kit; Remote display only in conjunction with MultiPro 3G (BT module) usable | H-6006005 |


^{*} No optional accessories are required for normal operation.

 $^{^{\}star\star}$ Standard for the HST-150-XY version of the handling stand.

HST-300

Precise, reaction-free and extremely light handling in the entire workspace.

Absorption of all reaction forces and compensation of torques up to 300 Nm. Optimal smooth-running weight compensation with a maximum tool weight of 30 kg. Extensive range of equipment options for the models HST-300 (without sensor) and HST-300-XY (with integrated position monitoring) available.

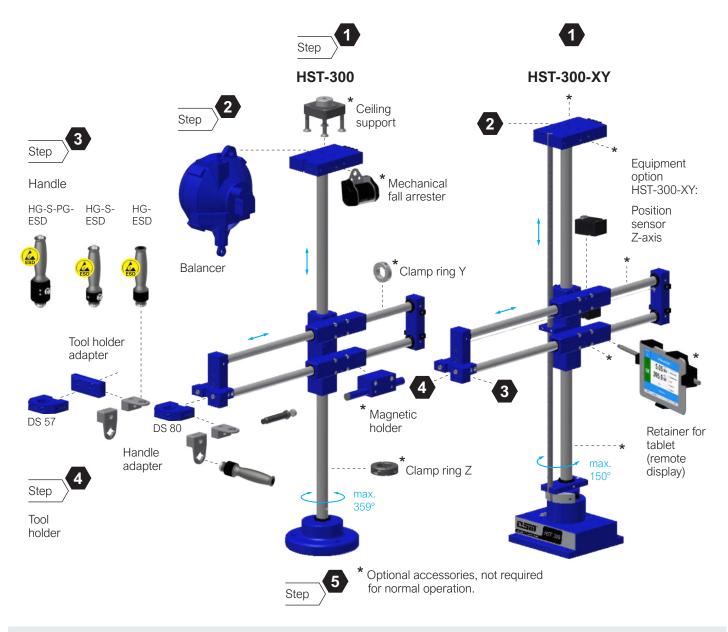

Use the following steps to assemble your handling stand and select the optimal components from the HST-300 series for your application.



Step







Add optional accessories

Choose between the variant HST-300 and HST-300-XY

Choose a balancer for the weight compensation

Choose a handle

Choose a tool holder

if necessary



Variant of the handling stand (Size HST-300)

| | | | HST-300 | HST-300-XY |
|---|------|------------|-----------|-------------|
| Absolute XY position sensor | | | | ✓ |
| Position controller (PoSys) integrated in the stand | | | | ✓ |
| Vertical stroke (Z) | [mm] | | 850 | 850 |
| Horizontal stroke (Y) | [mm] | | 600 | 600 |
| Swivel angle | [°] | max. | 359 | 150 |
| Reaction torque | [Nm] | up to max. | 300 | 300 |
| Tool weight | [kg] | max. | 30 | 30 |
| Height of vertical stand | [mm] | | 1320 | 1390 |
| Length of horizontal arm (without tool holder) | [mm] | | 980 | 980 |
| Weight horizontal arm | [kg] | | 21 | 21 |
| Weight handling stand | [kg] | | 60 | 60 |
| Article number | | | H-6002157 | see Page 16 |

HST-300 | HST-300-XY - Robust designed handling stand

Pedestal with mounting holes, vertical stand with precision shaft, horizontal arm with precision double shaft as well as guides with smooth-running industrial bearings. Construction to accommodate torsion forces with fixing points for balancer and cable, prepared for the mounting of tool holder and handle.

HST-300-XY - Position monitoring of assembly tool

Fixed sequences have to be observed by a lot of applications of the hand-guided and the semi-automated assembly. Equipped with an XY sensor system (Z sensor optional) and with an position controller (PoSys) integrated in the pedestal, the HST-300-XY extends the functionality of your tightening system. The position electronic monitors in conjunction with a higher-level control system that the required sequence is observed.

No screw will be forgotten – even complex tightening sequences can be specified and monitored. Or you select the corresponding sequence program on your DSM control system via the screw position.

Other features:

- Absolute XY position measurement in the rotation axis and in the horizontal arm
- Position input via teach-in, storage up to 200 positions
- Position monitoring
- Reporting of the stored positions "Pos reached"
- Direct output mode as "XY position"
- DSM software for programming and configuration of the positioning controller
- USB interface for connection with the DSM application software, incl. USB cable
- System bus interface for communication with DSM control system, for power supply via control system or plug-in power supply unit
- TCP/IP interface for communication with the DSM application software
- Optional Profibus interface, Profinet interface or EtherCAT interface for connection to a higher-level control system

Equipment option for handling stand HST-300-XY

| Туре | | Article number |
|-----------------------|--|----------------|
| HST-150-300-600-Zsens | Position sensor Z-axis, incl. Y-connection cable | H-6006014 |



PoSys Page 25

HST-300-XY equipped with position controller PoSys | Executions

| Туре | | Article number |
|----------------------|--|----------------|
| HST-300-XY-PB | Handling stand with XY sensors and integrated PoSys with Profibus interface | H-6002156 |
| HST-300-XY-PN | Handling stand with XY sensors and integrated PoSys with Profinet interface | H-6002158 |
| HST-300-XY-EC | Handling stand with XY sensors and integrated PoSys with EtherCAT interface | H-6002160 |
| Equipment option | 1 | |
| Туре | | Article number |
| Plug-in power supply | y unit AC 230 V / 50 Hz DC 24 V / 1 A (for use without DSM control system) | DSM-600611 |
| System bus acce | ssories | |
| Туре | | Article number |
| System bus cable 2 | ? m | MS-1003002 |
| System bus cable 5 | i m | MS-1003005 |
| System bus termina | ting resistor | MS-1003030 |
| Y-piece for system b | ous connection | MS-1003046 |



Take tool weight and the weight of the horizontal arm into account when choosing the balancer.

Handling balancer HBA for handling stand HST-300 | HST-300-XY

| Туре | Ideal for DSM nutrunner | Weight compensation, load capacity adjustable | Article number |
|-------------|-------------------------|---|----------------|
| HBA-3040-kg | DS 57 / DS 80 | from 30 kg up to 40 kg | H-6008040 |



Ergonomically formed handles for precise guidance of the tool (nutrunner). Versatile mounting possibilities via handle adapter. Execution with start button for the direct forwarding of the start signal to the control system. Variant with rotary switch for switching between the preselected sequence programme and an alternative sequence.

Handle

| Туре | | Article number |
|-------------|--|----------------|
| HG-ESD | Standard handle in ESD-compliant design | H-6007820 |
| HG-S-ESD | Handle with start button (double) in ESD-compliant design | H-6007825 |
| HG-S-PG-ESD | Handle with start button (double) and programme switchover in ESD-compliant design | H-6007830 |

Standard adapter for the vertical and horizontal assembly of the handle. The installation can be made on the right and left side as well as on the front of the tool holder of the handling stand.

Handle adapter for the HST-300 series

| Туре | | Article number |
|-------------------|--|----------------|
| HG-A-H150-300-600 | Handle adapter kit HST-150 / HST-300 / HST-600 | H-6007885 |

Choose the appropriate cable depending on the use of the handle.

If you are using a nutrunner of the DS 57 or DS 80 series the connection to the DSM control is made via the bus line of the DS nutrunner – the handle cable is plugged into the SB socket at the nutrunner. The cable is available in two different lengths suitable for the respective assembly situation.

Alternatively, the handle can be connected directly with the control system or with a higher-level control system. Corresponding cables for this can be found in the table below.

Handle cable for the HST-300 series

| Туре | Connection | Cable length | Article number |
|--------------------|---|--------------|----------------|
| HG-K-DS57-80-160 | from HG-S-ESD to DS 57 / DS 80 | 160 mm | H-6007958 |
| HG-K-DS57-80-300 | from HG-S-ESD to DS 57 / DS 80 | 300 mm | H-6007959 |
| HG-K-DS57-80-500 | from HG-S-ESD to DS 57 / DS 80 | 500 mm | H-6007960 |
| HG-K-24V-4.XX | from HG-S-ESD to MultiBasic / MultiClassic / MultiPro | 5 m | H-6007905 |
| HG-K-24V-5.XX | from HG-S-ESD to MultiPro 3G | 5 m | H-6007910 |
| HG-K-24-oK | from HG-S-ESD to (open cable ends) | 5 m | H-6007915 |
| HGPG-K-24-oK | from HG-S-PG-ESD to (open cable ends) | 2 m | H-6007720 |
| HGPG-K-DS57-80-160 | from HG-S-PG-ESD to DS 57 / DS 80 | 160 mm | H-6007755 |
| HGPG-K-DS57-80-300 | from HG-S-PG-ESD to DS 57 / DS 80 | 300 mm | H-6007756 |
| HGPG-K-DS57-80-500 | from HG-S-PG-ESD to DS 57 / DS 80 | 500 mm | H-6007757 |



The tool / nutrunner is attached to the handling stand with a suitable holder. Tool holders adapted to the size of the DSM nutrunners that can be used can be selected here. Adaptation of third-party products is made with a customised solution on request.

Handling tool holder for the HST-300 series

| Туре | Tool holder for | Article number |
|--------------|--------------------------|----------------|
| HWA-300-DS80 | DS 80 Built-in nutrunner | H-6008380 |

The tool holders of the HST-150 can be attached to the handling stand HST-300 with the aid of a tool holder adapter.

Handling tool holder adapter for the HST-300 series

| Туре | | Article number |
|------------|--|----------------|
| HWA-300-AD | Adaptation of tool holders type "HWA-150" to HST-300 | H-6008153 |

HST-150 handling tool holder for the use with adapter HWA-300-AD

| Туре | Tool holder for | Article number |
|-------------------|---|----------------|
| HWA-150-DS57 | DS 57 Built-in nutrunner | H-6008157 |
| HWA-150-Uni-56-62 | 56 - 62 mm clamping diameter, Universal tool holder | H-6008155 |



Accessories for individual adaptation of the handling stand for your application.

Optional accessories* Handling stand HST-300

| Туре | | Article number |
|------------------------|---|----------------|
| HST-300-MH | Magnetic holder Magnetically holding device for the Y-axis to fix the nutrunner / tool in park position | H-6006305 |
| HST-300-600-DA | Ceiling support Additional fixing of the handling stand via a pivoted support designed to improve the load carrying capacity | H-6006310 |
| HST-150-KL-Z-300-KL-Y | Clamp ring for Y-axis Variable positionable limiter of the horizontal stroke for the fast reaching of the tool position | H-6006330 |
| HST-300-KL-Z-600-KL-YZ | Clamp ring for Z-axis Variable positionable limiter of the vertical stroke for the fast reaching of the tool position | H-6006340 |
| HST-150-300-FS | Mechanical fall arrester Fall protection for horizontal arm to prevent damage in case of a defect of the counterbalance system | H-6006315 |
| HST-300-600-SWA** | Stops for swivel angle limitation (rotation axis) Two circle segments with rubber stops for the limitation of the swivel angle adjustable in steps of 30 degrees (min. 20° / max. 150°) | H-6006320 |
| HST-FA | Retainer for tablet (remote display) Adjustable retainer for the remote display HMI 7" incl. assembly kit; Remote display only in conjunction with MultiPro 3G (BT module) usable | H-6006005 |


^{*} No optional accessories are required for normal operation.

^{**} Standard for the HST-300-XY version of the handling stand.

HST-600

Precise, reaction-free and extremely light handling in the entire workspace.

Absorption of all reaction forces and compensation of **torques up to 600 Nm**. Optimal smooth-running weight compensation with a maximum **tool weight of 40 kg**. Extensive range of equipment options for the models **HST-600** (without sensor) and **HST-600-XY** (with integrated position monitoring) available.

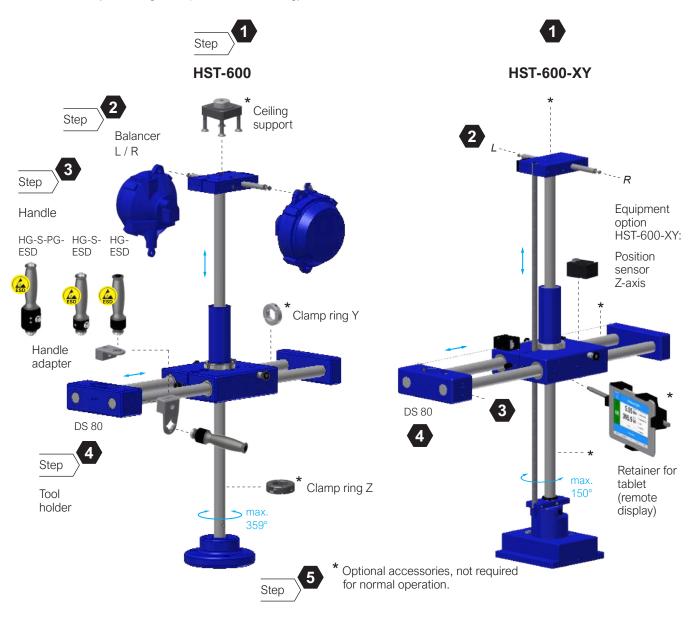

Use the following steps to assemble your handling stand and select the optimal components from the HST-600 series for your application.



Choose between the variant HST-600 and HST-600-XY



Choose a balancer for the weight compensation



Choose a handle



Choose a tool holder



Add optional accessories if necessary



Variant of the handling stand (Size HST-600)

| | | | HST-600 | HST-600-XY |
|---|------|------------|-----------|-------------|
| Absolute XY position sensor | | | | ✓ |
| Position controller (PoSys) integrated in the stand | | | | ✓ |
| Vertical stroke (Z) | [mm] | | 750 | 750 |
| Horizontal stroke (Y) | [mm] | | 550 | 550 |
| Swivel angle | [°] | max. | 359 | 150 |
| Reaction torque | [Nm] | up to max. | 600 | 600 |
| Tool weight | [kg] | max. | 40 | 40 |
| Height of vertical stand | [mm] | | 1320 | 1390 |
| Length of horizontal arm (without tool holder) | [mm] | | 1050 | 1050 |
| Weight horizontal arm | [kg] | | 45 | 45 |
| Weight handling stand | [kg] | | 90 | 90 |
| Article number | | | H-6002600 | see Page 22 |

HST-600 | HST-600-XY - Robust designed handling stand

Pedestal with mounting holes, vertical stand with precision shaft, horizontal arm with precision double shaft as well as guides with smooth-running industrial bearings. Construction to accommodate torsion forces with fixing points for balancer and cable, prepared for the mounting of tool holder and handle.

HST-600-XY - Position monitoring of assembly tool

Fixed sequences have to be observed by a lot of applications of the hand-guided and the semi-automated assembly. Equipped with an XY sensor system (Z sensor optional) and with an position controller (PoSys) integrated in the pedestal, the HST-600-XY extends the functionality of your tightening system. The position electronic monitors in conjunction with a higher-level control system that the required sequence is observed.

No screw will be forgotten – even complex tightening sequences can be specified and monitored. Or you select the corresponding sequence program on your DSM control system via the screw position.

Other features:

- Absolute XY position measurement in the rotation axis and in the horizontal arm
- Position input via teach-in, storage up to 200 positions
- Position monitoring
- Reporting of the stored positions "Pos reached"
- Direct output mode as "XY position"
- DSM software for programming and configuration of the positioning controller
- USB interface for connection with the DSM application software, incl. USB cable
- System bus interface for communication with DSM control system, for power supply via control system or plug-in power supply unit
- TCP/IP interface for communication with the DSM application software
- Optional Profibus interface, Profinet interface or EtherCAT interface for connection to a higher-level control system

Equipment option for handling stand HST-600-XY

| Туре | | Article number |
|-----------------------|--|----------------|
| HST-150-300-600-Zsens | Position sensor Z-axis, incl. Y-connection cable | H-6006014 |



PoSys Page 25

HST-600-XY equipped with position controller PoSys | Executions

| Туре | | Article number |
|----------------------|--|----------------|
| HST-600-XY-PB | Handling stand with XY sensors and integrated PoSys with Profibus interface | H-6002605 |
| HST-600-XY-PN | Handling stand with XY sensors and integrated PoSys with Profinet interface | H-6002604 |
| HST-600-XY-EC | Handling stand with XY sensors and integrated PoSys with EtherCAT interface | H-6002603 |
| Equipment option | | |
| Туре | | Article number |
| Plug-in power suppl | y unit AC 230 V / 50 Hz DC 24 V / 1 A (for use without DSM control system) | DSM-600611 |
| System bus acce | ssories | |
| Туре | | Article number |
| System bus cable 2 | ? m | MS-1003002 |
| System bus cable 5 | i m | MS-1003005 |
| System bus termina | ting resistor | MS-1003030 |
| Y-piece for system b | ous connection | MS-1003046 |



Take tool weight and the weight of the horizontal arm into account when choosing the balancer.

Handling balancer set for handling stand HST-600 | HST-600-XY

| Туре | Quantity | Ideal for DSM nutrunner | Weight compensation, load capacity adjustable | Article number |
|-------------|----------|-------------------------|---|----------------|
| HBA-3040-kg | 2 pcs. | DS 80 | from 30 kg up to 40 kg | H-6008050 |



Ergonomically formed handles for precise guidance of the tool (nutrunner). Versatile mounting possibilities via handle adapter. Execution with start button for the direct forwarding of the start signal to the control system. Variant with rotary switch for switching between the preselected sequence programme and an alternative sequence.

Handle

| Туре | | Article number |
|-------------|--|----------------|
| HG-ESD | Standard handle in ESD-compliant design | H-6007820 |
| HG-S-ESD | Handle with start button (double) in ESD-compliant design | H-6007825 |
| HG-S-PG-ESD | Handle with start button (double) and programme switchover in ESD-compliant design | H-6007830 |

Adapter for the vertical and for the horizontal assembly of the handle. The installation can be made on the right as well as on the left side of the tool holder of the handling stand.

Handle adapter for the HST-600 series

| Туре | | Article number |
|-------------------|--|----------------|
| HG-A-H150-300-600 | Handle adapter kit HST-150 / HST-300 / HST-600 | H-6007885 |

Choose the appropriate cable depending on the use of the handle.

If you are using a nutrunner of the DS 80 series the connection to the DSM control is made via the bus line of the DS nutrunner – the handle cable is plugged into the SB socket at the nutrunner. The cable is available in two different lengths suitable for the respective assembly situation.

Alternatively, the handle can be connected directly with the control system or with a higher-level control system. Corresponding cables for this can be found in the table below.

Handle cable for the HST-600 series

| Туре | Connection | Cable length | Article number |
|--------------------|---|--------------|----------------|
| HG-K-DS57-80-160 | from HG-S-ESD to DS 57 / DS 80 | 160 mm | H-6007958 |
| HG-K-DS57-80-300 | from HG-S-ESD to DS 57 / DS 80 | 300 mm | H-6007959 |
| HG-K-DS57-80-500 | from HG-S-ESD to DS 57 / DS 80 | 500 mm | H-6007960 |
| HG-K-24V-4.XX | from HG-S-ESD to MultiBasic / MultiClassic / MultiPro | 5 m | H-6007905 |
| HG-K-24V-5.XX | from HG-S-ESD to MultiPro 3G | 5 m | H-6007910 |
| HG-K-24-oK | from HG-S-ESD to (open cable ends) | 5 m | H-6007915 |
| HGPG-K-24-oK | from HG-S-PG-ESD to (open cable ends) | 2 m | H-6007720 |
| HGPG-K-DS57-80-160 | from HG-S-PG-ESD to DS 57 / DS 80 | 160 mm | H-6007755 |
| HGPG-K-DS57-80-300 | from HG-S-PG-ESD to DS 57 / DS 80 | 300 mm | H-6007756 |
| HGPG-K-DS57-80-500 | from HG-S-PG-ESD to DS 57 / DS 80 | 500 mm | H-6007757 |
| | | | |



The tool / nutrunner is attached to the handling stand with a suitable holder. Tool holders adapted to the size of the DSM nutrunners that can be used can be selected here. Adaptation of third-party products is made with a customised solution on request.

Handling tool holder for the HST-600 series

Туре

Tool holder for DS 80 built-in nutrunners, permanently attached to the HST-600



Accessories for individual adaptation of the handling stand for your application.

Optional accessories* Handling stand HST-600

| Туре | | Article number |
|------------------------|---|----------------|
| HST-300-600-DA | Ceiling support Additional fixing of the handling stand via a pivoted support designed to improve the load carrying capacity | H-6006310 |
| HST-300-KL-Z-600-KL-YZ | Clamp ring for Y-axis Variable positionable limiter of the horizontal stroke for the fast reaching of the tool position | H-6006340 |
| HST-300-KL-Z-600-KL-YZ | Clamp ring for Z-axis Variable positionable limiter of the vertical stroke for the fast reaching of the tool position | H-6006340 |
| HST-300-600-SWA** | Stops for swivel angle limitation (rotation axis) Two circle segments with rubber stops for the limitation of the swivel angle adjustable in steps of 30 degrees (min. 20° / max. 150°) | H-6006320 |
| HST-FA | Retainer for tablet (remote display) Adjustable retainer for the remote display HMI 7" incl. assembly kit; Remote display only in conjunction with MultiPro 3G (BT module) usable | H-6006005 |

^{*} No optional accessories are required for normal operation.



^{**} Standard for the HST-600-XY version of the handling stand.

Position controller PoSys

Positioning electronics integrated in the pedestal of the **HST** (Fig.) as well as in the bracket of the **HSA**.

The position of the coordinates is entered using the teach-in procedure, whereby the corresponding position is approached with the handling system and stored in the position electronics with the PoSys software or via field bus.

The respective position is selected either via the system bus or from a PLC via field bus.

When the operator moves to the preselected position the PoSys positioning system reports this back via the system bus / field bus. The higher-level control system (DSM control system / PLC) can start the further processes.

The interaction of PoSys and the control system / PLC checks whether a defined operating sequence is maintained.

